

8. pico_ K210 facial recognition

1.K210 and Pico communication

1.1 Experimental premises

This tutorial uses Pico, and K210 requires running the program in **K210-AI (stm32_pico_arduino)** to start the experiment

Pico * 1

K210 perspective module * 1 (requires SD card (with AI model inside) and camera)



USB to TTL module * 1

1.2 Experimental wiring

pico	USB to TTL module
GP8	RXD
GND	GND

pico	k210
GP9	TXD
GND	GND
VCC	5V

Wiring as shown in the diagram :

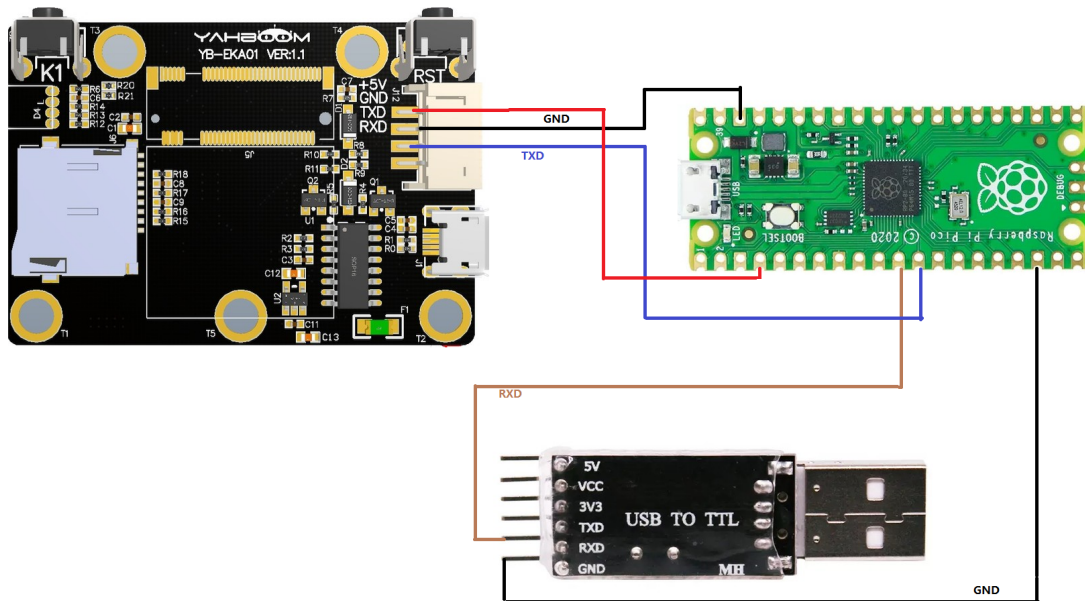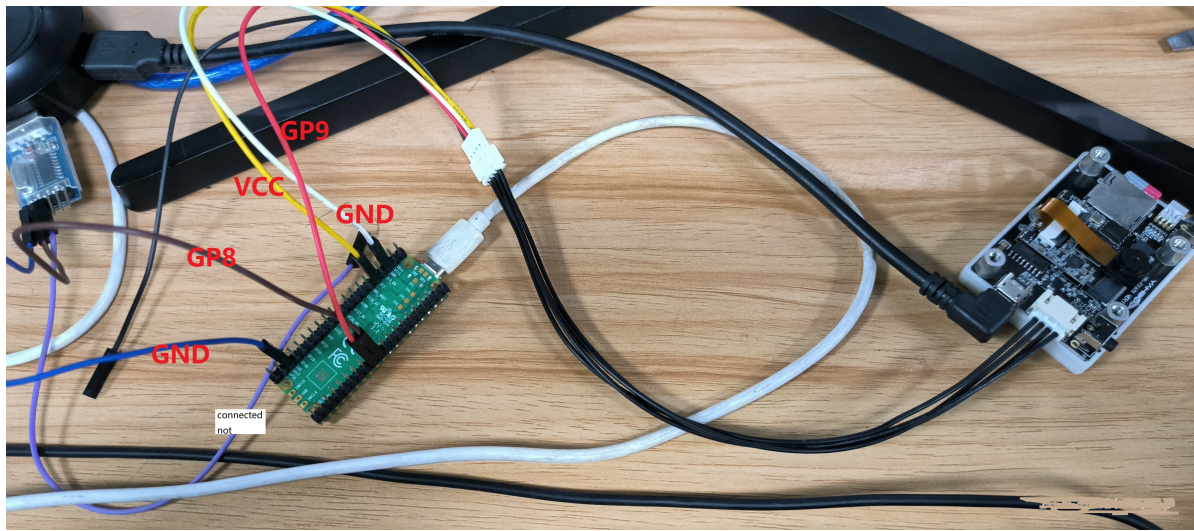

1.3 Main code parsing

```
u1 = UART(1, baudrate=115200, tx=Pin(8), rx=Pin(9), bits=8, parity=None, stop=0)

k210_data_class = 0
k210_data_x = 0
k210_data_y = 0
k210_data_w = 0
k210_data_h = 0
k210_data_id = 0
k210_data_msg = ""

while True:
    while u1.any() > 0:
        rxx=u1.read()
        #u1.write(rxx)
        recv_k210_data(rxx)

    if k210_data_class != 0:
```



```

        if k210_data_class == 8:
            sstr = "x="+str(k210_data_x) + " y="+str(k210_data_y) + "
w="+str(k210_data_w) + " h="+str(k210_data_h) +"\r\n"
            u1.write(sstr)
            if k210_data_id == 'Y' or k210_data_id == 'y':
                u1.write("Yes\r\n")
            else :
                u1.write("No\r\n")
            #u1.write(k210_data_msg+'\r\n')
        k210_data_class = 0

```

Obtained from the program

- k210_data_class :Routine number
- k210_data_x :It identifies the horizontal coordinate of the upper left corner of the box (range: 0-240)
- k210_data_y :It identifies the vertical coordinate of the upper left corner of the box (range: 0-320)
- k210_data_w :The width of the recognized box (range: 0-240)
- k210_data_h :The length of the recognized box (range: 0-320)
- k210_data_id :It's a recognized label
- k210_data_msg :It's the identified information

This processing mainly involves receiving a message from k210 and calling recv_K210_Data() for processing and assigning the processed information to k210_Data_Members of XXX.

Attention

If you want to develop for the second time, without changing the K210 program and data processing functions, directly call K210_Data_ The variable of XXX is good (xxx: refers to x y w h id msg)

1.4 experimental phenomena

1. After connecting the cable, the K210 perspective module can run offline. Press key1 to enter facial information input

[K210 offline operation method](#)

2. Set the serial port assistant to the interface shown in the figure

COM Configs

Channel: COM1

Baudrate: 115200

Paritybits: NONE

Databits: 8

Stopbits: 1

Flowctrl: NONE

Close

Recv Options

☒ ASCII ☐ HEX

☒ Log display mode

☒ Auto linefeed

☐ Hide received data

☐ Recv save to file...

[AutoScroll](#) [Clear](#)

Send Options

☒ ASCII ☐ HEX

☒ Enable escape chars

☒ AT CMD auto CRLF


☐ Auto append bytes

☐ Send from file ...

☐ Period: 1000 ms

[Shortcut](#) [History](#)

3. Download Pico's Python firmware into Pico and run the color recognition program provided in this tutorial. How to run Pico's Python program? Please refer to the Pico related environment building tutorial, which will not be elaborated in this tutorial
4. Then k210 runs the relevant routines, and the serial assistant will print out the important information transmitted by k210 to Pico. The phenomenon shown in the figure below is the result of facial recognition

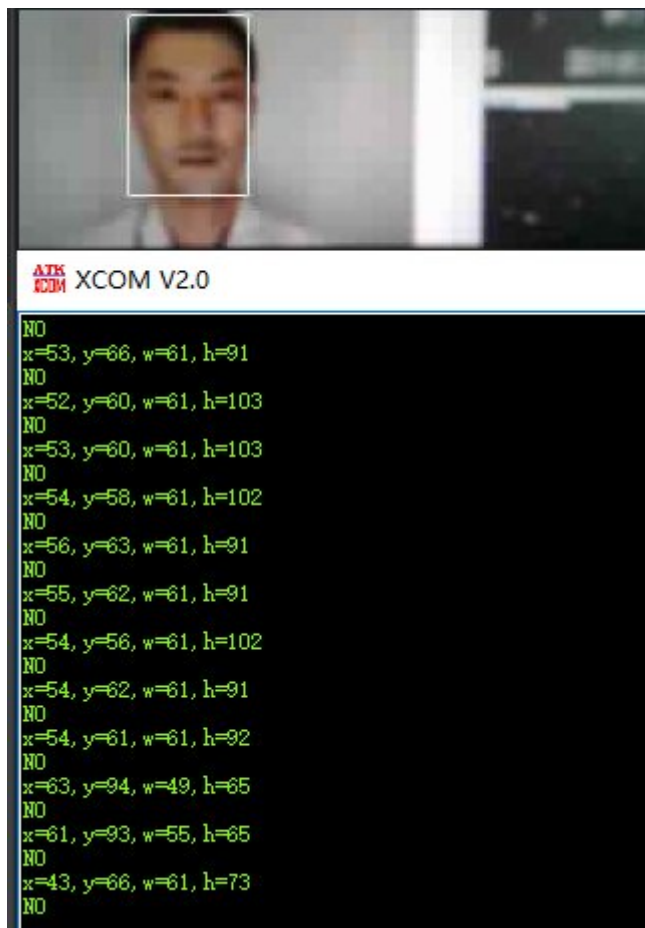

This routine only outputs data for these 5 members of x y w h id
ID: The information is Y/N, with Y: recorded faces and N: mismatched faces